

Friday, 10/13/2006 9:26:44 AM  
Kim Johnston

## Process Sheet

Order Number : CU-DAR001 Dart Helicopters Services  
Job Number : 28956  
Estimate Number : 12472  
P.O. Number : *N/A*  
This Issue : 10/13/2006 S.O. No. : *N/A*  
Prsht Rev. : NC  
First Issue : *N/A* Type : LANDING GEAR  
Previous Run : 28955

Drawing Name : EC 135 SKIDTUBE ASSEMBLY

Part Number : D135751011

Drawing Number : D3507 REV *A* *12-18*

Project Number : N/A

Drawing Revision : A

Material : *N/A*

Due Date : 11/15/2006

Qty: 1 Um: Each

Written By : *[Signature]*  
Checked & Approved By : *[Signature]*  
Comment : Est Rev: A 06-06-21 New Issue JLM



## Additional Product

Job Number:



Seq. #:	Machine Or Operation:	Description :
1.0	DC	DOCUMENT CONTROL



Comment: DOCUMENT CONTROL

Photocopy bluefile & type labels per PPP D135-751-011 CHG001 *5/12/19*

2.0

D2962150

3.540 Outer Tube, Extrud



Comment: Qty.: 1.0000 Each(s)/Unit Total: 1.0000 Each(s)

Pick:

Qty Part Number Description Batch

1 D2962-150 Extrusion *B27774 DP 6-11-16*

3.0

LANDING GEAR 1

LANDING GEAR RESOURCE 1



Comment: LANDING GEAR RESOURCE 1

1-Determine square end of tube and deburr

2-Drill #30 pilot holes using DT8678. Do not open holes.

3- Deburr holes. *N/A*

4.0

BENDING

BENDING MACHINE



Comment: BENDING MACHINE

Bend tube as per program on CNC Bender and Dwg D3507. Use 5/16" locator pin on buggy "A": *N/A*

**Dart Aerospace Ltd**

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

## Process Sheet

Customer: CU-DAR001 Dart Helicopters Services

Drawing Name: EC 135 SKIDTUBE ASSEMBLY

Job Number: 28956

Part Number: D135751011

Job Number:



Seq. #:

Machine Or Operation:

Description :

5.0

LANDING GEAR 1

LANDING GEAR RESOURCE 1



Comment: LANDING GEAR RESOURCE 1

- 1-Cut Fwd end of the tube using DT8185
- 2-Cut Aft end at VC using DT8185
- 3-Deburr ends
- 4-Drill Aft & Fwd Cap holes using DT8678
- 5-Locate DT8870 & Drill Ground wire hole on top of Tube.
- 6-Locate DT8870 with 3/16" cleco in Ground wire hole, then Pilot Drill all X-Bolt holes using 3/16" drill.
- 7-Open Aft & Fwd Cap holes using .208" drill.
- 8-Drill pilot holes for wearplates using Dt8868
- 9-Open wearplate holes to Ø19/64" (0.297") as per Dwg D3507.
- 10-Bore out aft end of tube as per Dwg D3507 & Detail "B".
- 11-Deburr holes.

6-11-16

6.0

QC5

INSPECT WORK TO CURRENT STEP



Comment: INSPECT WORK TO CURRENT STEP

07/02/280

7.0

HAND FINISHING1

HAND FINISHING RESOURCE #1



Comment: HAND FINISHING RESOURCE #1

Chemical Conversion Coat as per QSI 005 4.1

07-02-280

8.0

QC3

INSPECT POWDER COAT/CHEMICAL CONVERSION



Comment: INSPECT POWDER COAT/CHEMICAL CONVERSION

07-02-28



# Process Sheet

Customer: CU-DAR001 Dart Helicopters Services

Drawing Name: EC 135 SKIDTUBE ASSEMBLY

Job Number: 28956

Part Number: D135751011

Job Number:



Seq. #:	Machine Or Operation:	Description :
---------	-----------------------	---------------

9.0	D35043	CROSSBOLT SPACER
-----	--------	------------------



Comment: Qty.: 1.0000 Each(s)/Unit Total : 1.0000 Each(s)

CROSSBOLT SPACER

Batch: B-28034

10.0	D35041	CROSSBOLT SPACER
------	--------	------------------



Comment: Qty.: 2.0000 Each(s)/Unit Total : 2.0000 Each(s)

CROSSBOLT SPACER

Batch: B-31234

11.0	D35051	WEB
------	--------	-----



Comment: Qty.: 1.0000 Each(s)/Unit Total : 1.0000 Each(s)

WEB

Batch: B28962 Pm 07-03-01 (1)

12.0	D35061	DOUBLER
------	--------	---------



Comment: Qty.: 4.0000 Each(s)/Unit Total : 4.0000 Each(s)

DOUBLER

Batch: B28963 Pm 07-03-28 (1)

13.0	D35063	DOUBLER
------	--------	---------



Comment: Qty.: 2.0000 Each(s)/Unit Total : 2.0000 Each(s)

DOUBLER

Batch: B28964 Pm 07-03-28 (1)

14.0	MS20601AD4W3	Rivet
------	--------------	-------



Comment: Qty.: 12.0000 Each(s)/Unit Total : 12.0000 Each(s)

Rivet

Batch: M8325 Pm 07-03-28 (1)


15.0	LANDING GEAR 1	LANDING GEAR RESOURCE 1
------	----------------	-------------------------



Comment: LANDING GEAR RESOURCE 1

1-Open X-Bolt holes to .375"(2Places) & .500"(2Places) as per Dwg D3507. and Detail "F" Pm 07-02-28 (1)

2-Counter Sink X-BOLT holes as per Dwg D3507 Pm 07-02-28 (1)

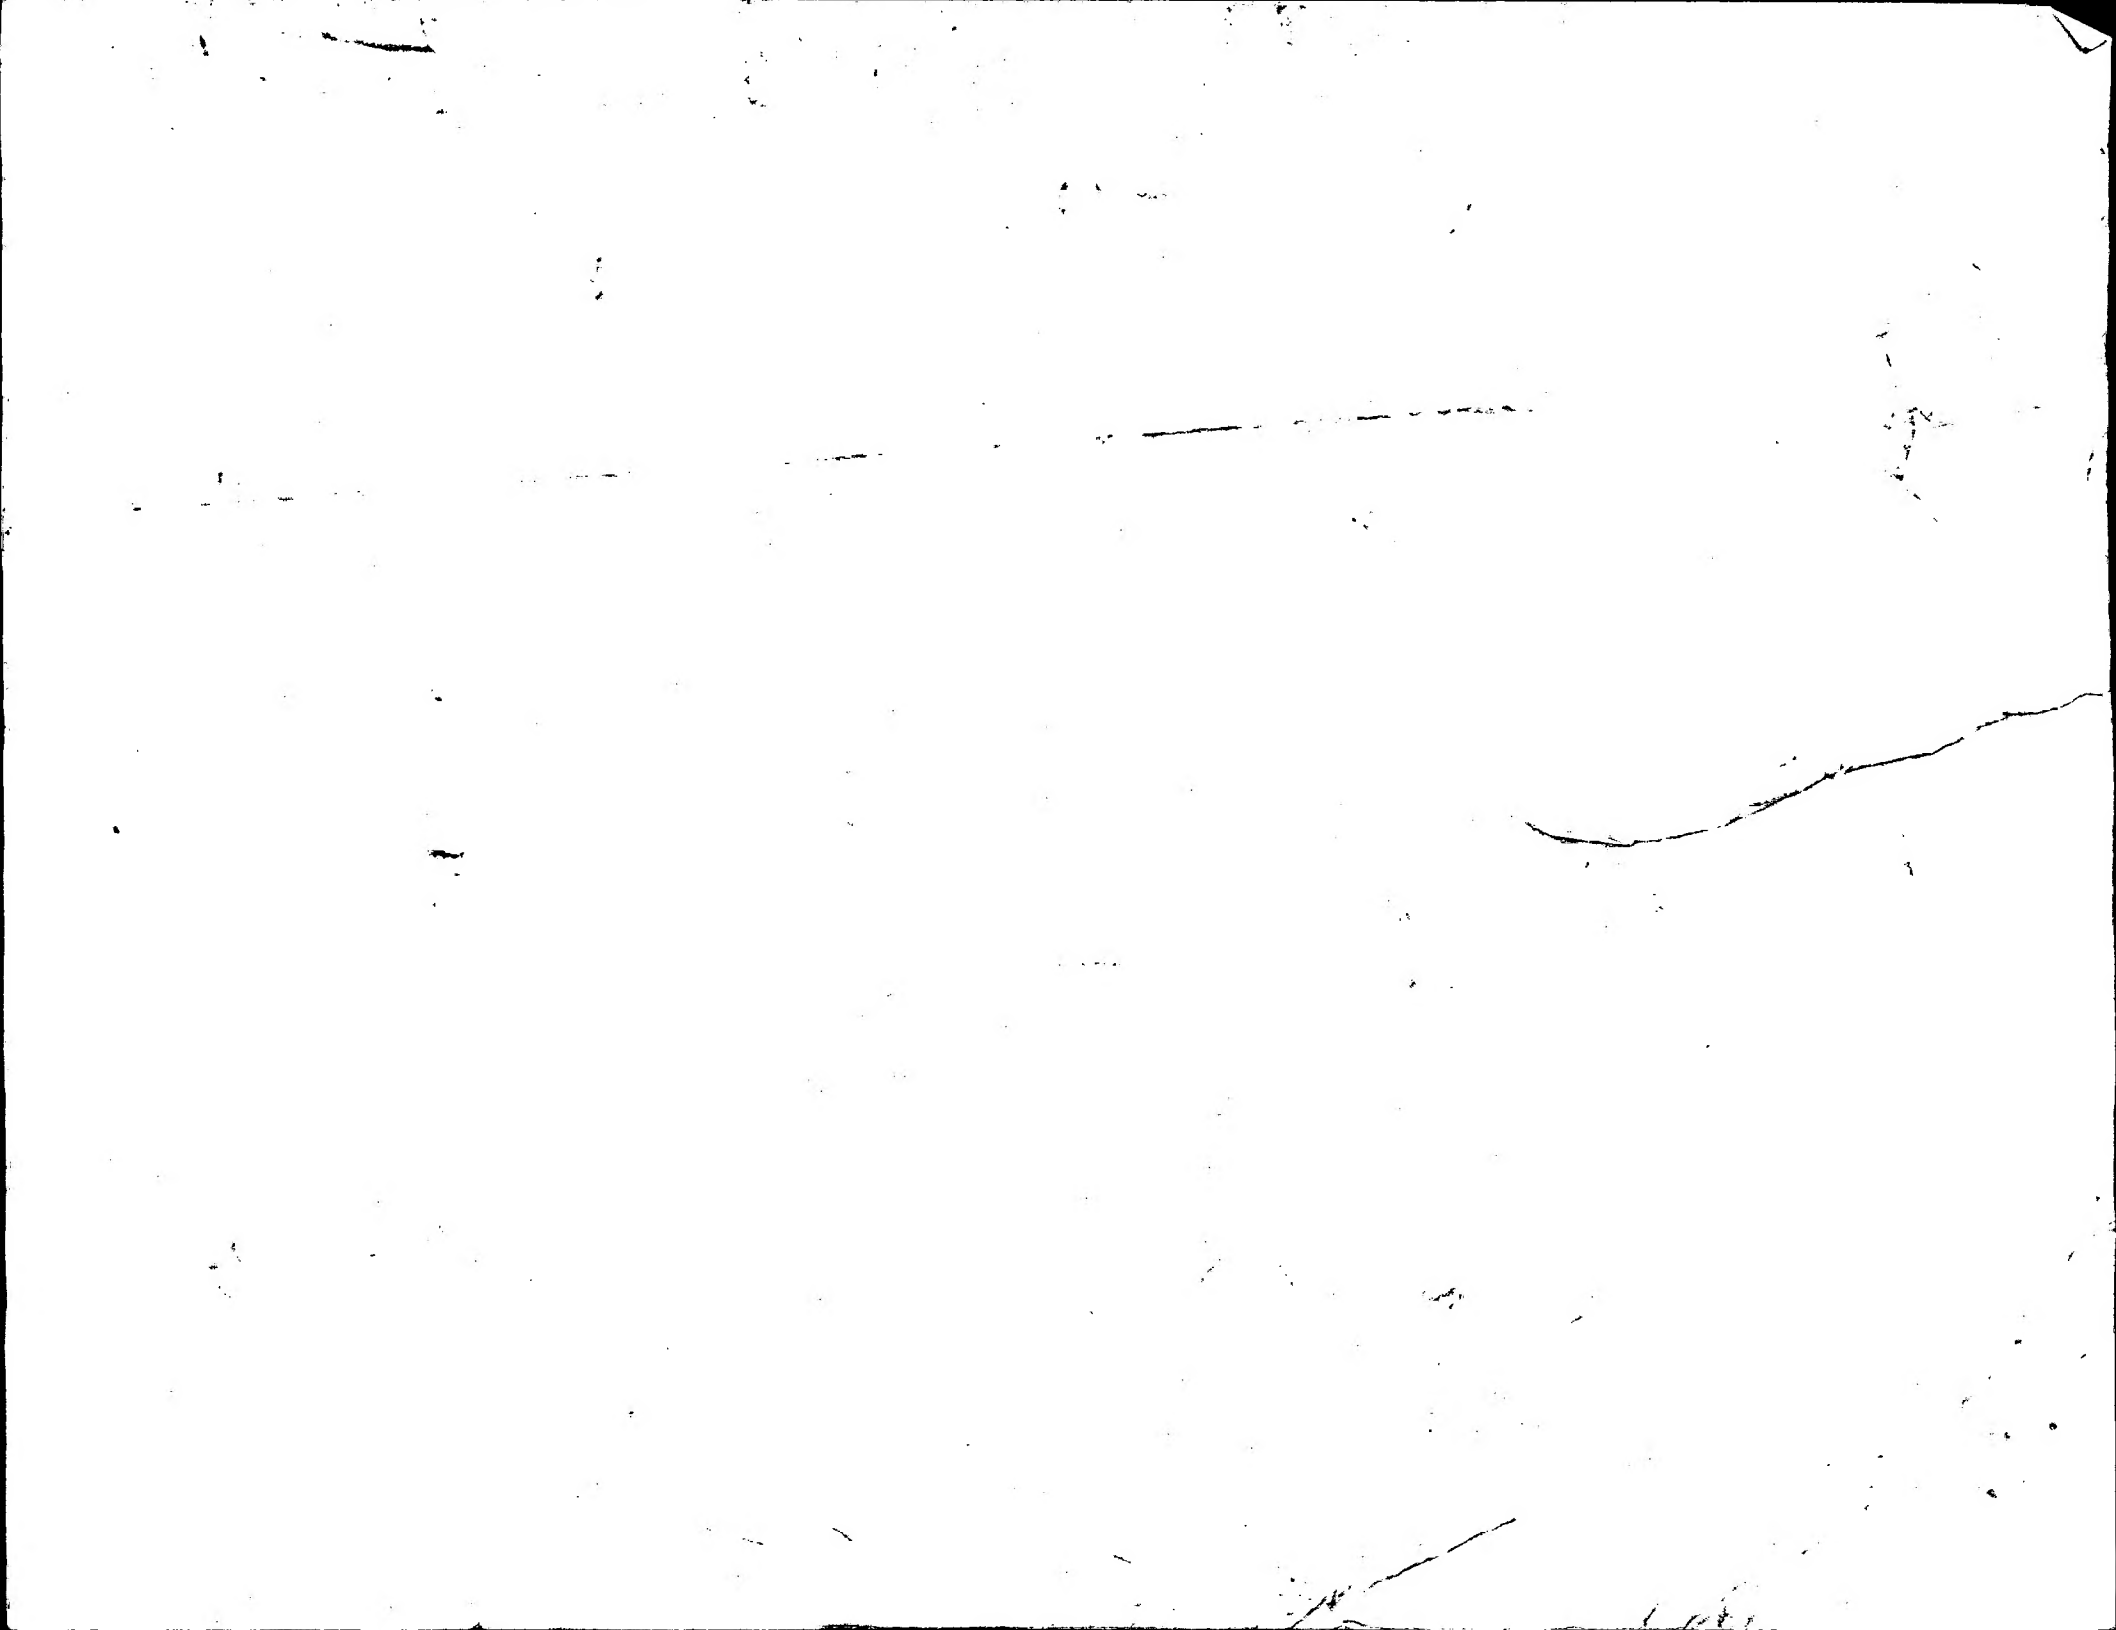

Date: Monday, 12/18/2006 1:21:24 PM  
User: Jean-Luc Menard

## Process Sheet

Customer: CU-DAR001 Dart Helicopters Services

Drawing Name: EC 135 SKIDTUBE ASSEMBLY

Job Number: 28956

Part Number: D135751011

Job Number:



Seq. #: Machine Or Operation: Description :

3-Debur and blow out chips from inside of tube. *Pm 07-02-280*

4-Bond web as per Dwg D3507 & QSI 015

A/R 241 Sike Flex Batch: *m103497*  
Exp Date: *07-10-01*

*Pm 07-03-010*

5-Weld x-bolt (D3504-1/-3) spacers as per Dwg D3507 and Detail C-C & D-D.

A/R AL ROD Batch: *M103317* *BE 07-03-26*

6-Grind welds flush *BE 07-03-26*

7-Drill Rivet Holes as per Dwg D3507 Using Dt8871A&B *BE 07-03-26*

8-Debur Rivet holes. *BE 07-03-26*

Tools: E

16.0

QC9

VISUAL WELDING INSPECTION



Comment: VISUAL WELDING INSPECTION

*07/03/280*

17.0

LANDING GEAR 1

LANDING GEAR RESOURCE 1



Comment: LANDING GEAR RESOURCE 1

*Pm 07-03-280*

1-Rivet D3506-1/-3 as per Dwg D3507.

18.0

QC5

INSPECT WORK TO CURRENT STEP



Comment: INSPECT WORK TO CURRENT STEP

*07/03/280*

19.0

POWDER COATING

POWDER COATING



Comment: POWDER COATING

Powder Coat White Gloss (Ref: 4.3.5.1) as per QSI 005 4.3

*M105068 BR/FL*

*07-08-21*

*PRESS WASH BR/FL 07-08-20*

20.0

QC3

INSPECT POWDER COAT/CHEMICAL CONVERSION



Comment: INSPECT POWDER COAT/CHEMICAL CONVERSION

*FL 07/08/270*

## Process Sheet

Customer: CU-DAR001 Dart Helicopters Services

Drawing Name: EC 135 SKIDTUBE ASSEMBLY

Job Number: 28956

Part Number: D135751011

Job Number:



See w/o # 36167

Seq. #: Machine Or Operation: Description :

21.0 ALS71032130 Insert



Comment: Qty.: 38.0000 Each(s)/Unit Total : 38.0000 Each(s)

Insert

Batch: m102475

FL

22.0 ALS41032225 Insert



Comment: Qty.: 1.0000 Each(s)/Unit Total : 1.0000 Each(s)

Insert

Batch: m19393

FL

23.0 HAND FINISHING1 HAND FINISHING RESOURCE #1



Comment: HAND FINISHING RESOURCE #1

Install Wearplate & Ground Wire inserts as per Dwg D3507.

FL 07/08/28 (1)

24.0 QC5 INSPECT WORK TO CURRENT STEP



Comment: INSPECT WORK TO CURRENT STEP

Inspect Inserts

En 07/08/08 (N)

25.0 D2965 Cap



Comment: Qty.: 1.0000 Each(s)/Unit Total : 1.0000 Each(s)

Cap

Batch: B316392

See w/o 36167

AS 04/12/19 (1)

26.0 D29653 Cap



Comment: Qty.: 1.0000 Each(s)/Unit Total : 1.0000 Each(s)

Cap

27.0 D35081 WEARPLATE



Comment: Qty.: 1.0000 Each(s)/Unit Total : 1.0000 Each(s)

WEARPLATE

Batch: B31196

FL



Date: Monday, 12/18/2006 1:21:25 PM  
User: Jean-Luc Menard

## Process Sheet

Customer: CU-DAR001 Dart Helicopters Services

Drawing Name: EC 135 SKIDTUBE ASSEMBLY

Job Number: 28956

Part Number: D135751011

Job Number:



\* see w/b # 36/67 P

Seq. #: Machine Or Operation: Description :

28.0 D35083 WEARPLATE



Comment: Qty.: 1.0000 Each(s)/Unit Total : 1.0000 Each(s)

WEARPLATE

Batch: B31196

FL

29.0 D35085 WEARPLATE



Comment: Qty.: 1.0000 Each(s)/Unit Total : 1.0000 Each(s)

WEARPLATE

Batch: B31197

FL

30.0 D35087 WEARPLATE



Comment: Qty.: 1.0000 Each(s)/Unit Total : 1.0000 Each(s)

WEARPLATE

Batch: B31198

FL

31.0 D35581 GASKET



Comment: Qty.: 1.0000 Each(s)/Unit Total : 1.0000 Each(s)

GASKET

BATCH: B29998

FL

32.0 D35583 GASKET



Comment: Qty.: 1.0000 Each(s)/Unit Total : 1.0000 Each(s)

GASKET

BATCH: B29999

FL

33.0 D35585 GASKET



Comment: Qty.: 1.0000 Each(s)/Unit Total : 1.0000 Each(s)

GASKET

BATCH: B30000

FL

34.0 D35587 GASKET



Comment: Qty.: 1.0000 Each(s)/Unit Total : 1.0000 Each(s)

GASKET

BATCH: B30001

FL

## Process Sheet

Customer: CU-DAR001 Dart Helicopters Services

Drawing Name: EC 135 SKIDTUBE ASSEMBLY

Job Number: 28956

Part Number: D135751011

Job Number:



*See w/o #3667\**

Seq. #: Machine Or Operation: Description :

35.0 D3492041 PLUG ASSEMBLY



Comment: Qty.: 4.0000 Each(s)/Unit Total : 4.0000 Each(s)  
PLUG ASSEMBLY  
Batch: *D33075*

*FL*

36.0 D3492047 PLUG ASSEMBLY



Comment: Qty.: 2.0000 Each(s)/Unit Total : 2.0000 Each(s)  
PLUG ASSEMBLY  
Batch: *D28961*

*FL*

37.0 ~~AN660D10L~~ *AN960C10L* Washer



Comment: Qty.: 35.0000 Each(s)/Unit Total : 35.0000 Each(s)  
Washer  
Batch: *m104537*

*FL*

38.0 AN3C4A BOLT



Comment: Qty.: 31.0000 Each(s)/Unit Total : 31.0000 Each(s)  
BOLT  
Batch: *m105407*

*FL*

39.0 AN3C5A Bolt



Comment: Qty.: 4.0000 Each(s)/Unit Total : 4.0000 Each(s)  
Bolt

40.0 HAND FINISHING1 HAND FINISHING RESOURCE #1



Comment: HAND FINISHING RESOURCE #1

1-Inspect for Foreign objects

2-Install Fwd & Aft caps as per Dwg D3507 And Detail "A" & "B"

A/R 241 Sika Flex Batch: \_\_\_\_\_  
Exp Date: \_\_\_\_\_

3-Install Wearplates as per Dwg D3507 ,seal screws with sikaflex.

Note:Install (1) screw and (1) washer on Ground Wire insert on top of tube  
Do not Install Scews where indicated on Dwg(Note #6)

A/R 241 Sika Flex Batch: \_\_\_\_\_  
Exp Date: \_\_\_\_\_

Date: Monday, 12/18/2006 1:21:25 PM  
User: Jean-Luc Menard

## Process Sheet

Customer: CU-DAR001 Dart Helicopters Services

Drawing Name: EC 135 SKIDTUBE ASSEMBLY

Job Number: 28956

Part Number: D135751011

Job Number:



Seq. #:

Machine Or Operation:

Description :

4-Install Plug assemblys as per Dwg D3507.

5- Wing Walk as per Dwg D3043 and QSI 005 4.4

41.0

QC5

INSPECT WORK TO CURRENT STEP



Comment: INSPECT WORK TO CURRENT STEP

See w/b # 36167

42.0

PACKAGING 1

PACKAGING RESOURCE #1



Comment: PACKAGING RESOURCE #1

Pick Packing Kit

43.0

D35121

WEARPLATE



Comment: Qty.: 2.0000 Each(s)/Unit Total : 2.0000 Each(s)

WEARPLATE

Batch:

360180

No Great

AS 07/12/19

(X)

44.0

M827009108

Screw



Comment: Qty.: 8.0000 Each(s)/Unit Total : 8.0000 Each(s)

Screw Bolt.

Batch:

65559

AS 07/12/19

(X)

45.0

AN960JD10L

Washer



Comment: Qty.: 8.0000 Each(s)/Unit Total : 8.0000 Each(s)

Washer

Batch:

1104374

AS 07/12/19

(X)

46.0

QC4

INSPECT 100% KITS FOR COMPLETENESS



Comment: INSPECT 100% KITS FOR COMPLETENESS

See w/b # 36167

47.0

PACKAGING 1

PACKAGING RESOURCE #1



Comment: PACKAGING RESOURCE #1

Identify and pack for shipping as per PPP D135-751-011

Location:

PPP Rev:

PPP

36167

36167 07/9/21

# Process Sheet

Customer: CU-DAR001 Dart Helicopters Services

Drawing Name: EC 135 SKIDTUBE ASSEMBLY

Job Number: 28956

Part Number: D135751011

Job Number:



Seq. #:

Machine Or Operation:

Description :

48.0

QC21

FINAL INSPECTION/W/O RELEASE



①

Comment: FINAL INSPECTION/W/O RELEASE

Done 12/24

Job Completion



U 07.12.24



DESIGN PH	DRAWN BY PH	DART AEROSPACE USA, INC. PORT HADLOCK, WA	
CHECKED H	APPROVED H	DRAWING NO. D3507	REV. B SHEET 1 OF 2
DATE 06.11.01		TITLE EC 135 SKIDTUBE	SCALE NTS
A	06.04.21	NEW ISSUE	
B	06.11.01	ADD GASKET, CHANGE HARDWARE MAT'L	

RELEASED

06.12.12

Qty	Part Number	Description
X	D3507-041	SKIDTUBE ASSEMBLY
1	D2962-150	EXTRUSION
1	D2965	CAP
1	D2965-3	CAP
4	D3492-041	PLUG ASSEMBLY
2	D3492-047	PLUG ASSEMBLY
2	D3504-1	CROSS BOLT SPACER
1	D3504-3	CROSS BOLT SPACER
1	D3505-1	WEB
4	D3506-1	DOUBLER
2	D3506-3	DOUBLER
1	D3508-1	WEARPLATE
1	D3508-3	WEARPLATE
1	D3508-5	WEARPLATE
1	D3508-7	WEARPLATE
1	D3558-1	GASKET
1	D3558-3	GASKET
1	D3558-5	GASKET
1	D3558-7	GASKET
38	AELS-1032-130	INSERT
1	AELS-1032-225	INSERT
31	AN3C4A	BOLT
4	AN3C5A	BOLT
35	AN960C10L	WASHER
12	MS20601AD4W3	RIVET


**GENERAL NOTES:**

- 1) ALL DIMENSIONS ARE IN INCHES
- 2) TOLERANCES ARE PER DART QSI 018 UNLESS OTHERWISE NOTED
- 3) WELDING TO BE DONE PER DART QSI 004.
- 4) INSERT D3505-1 WEB TO LOCATION SHOWN OFF AFT END OF SKIDTUBE AND BOND WEB INTO OUTER TUBE WITH NON-STRUCTURAL SIKAFLEX-241/-291 ADHESIVE PER DART QSI 015 AFTER BENDING.
- 5) USE DART DRILL TEMPLATE DT8868 TO LOCATE AND DRILL Ø0.297 HOLES (38 PLACES) FOR WEARSHOE INSERTS. INSTALL AELS-1032-130 PER SECTION C-C (38 PLACES) AFTER FINISH. SEAL WEARPLATE SCREWS WITH SIKAFLEX-241/-291.
- 6) DO NOT INSTALL AN3C4A BOLTS AND AN960C10L WASHERS IN INDICATED LOCATIONS.
- 7) FINISH:  
CHEMICAL CONVERSION COAT PER DART QSI 005 4.1 PRIOR TO INSERTING D3505-1 WEB. POWDER COAT ASSEMBLY GLOSS WHITE (REF 4.3.5.1) PER DART QSI 005 4.3. ANTI-SKID PAINT AS INDICATED TO 1.00 ABOVE CENTER LINE PER DART QSI 005 4.4 (OPTIONAL)


Copyright © 2006 by DART AEROSPACE USA, INC.

THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.








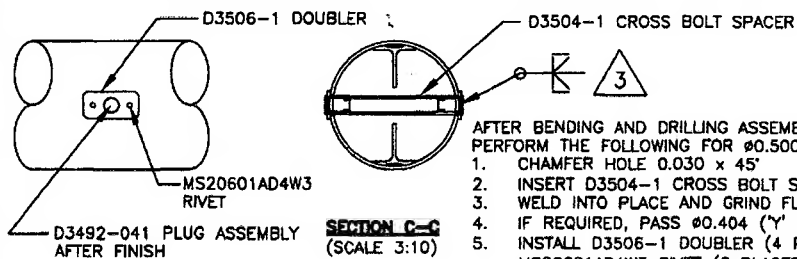

- AFTER BENDING AND DRILLING ASSEMBLY PERFORM THE FOLLOWING FOR Ø0.500 HOLES ONLY:
1. CHAMFER HOLE 0.030 x 45°
  2. INSERT D3504-1 CROSS BOLT SPACER (2 PLACES)
  3. WELD INTO PLACE AND GRIND FLUSH
  4. IF REQUIRED, PASS Ø0.404 (Y) DRILL THROUGH HOLE
  5. INSTALL D3506-1 DOUBLER (4 PLACES) USING MS20601AD4W3 RIVET (8 PLACES)
  6. AFTER FINISH, INSTALL D3492-041 PLUG ASSEMBLY (4 PLACES)

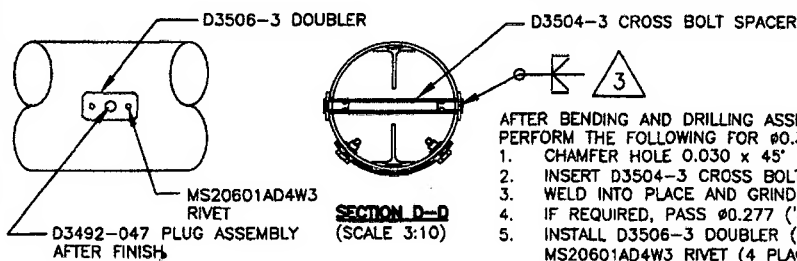

- AFTER BENDING AND DRILLING ASSEMBLY PERFORM THE FOLLOWING FOR Ø0.375 HOLES ONLY:
1. CHAMFER HOLE 0.030 x 45°
  2. INSERT D3504-3 CROSS BOLT SPACER (1 PLACES)
  3. WELD INTO PLACE AND GRIND FLUSH
  4. IF REQUIRED, PASS Ø0.277 (J) DRILL THRU HOLE
  5. INSTALL D3506-3 DOUBLER (2 PLACES) USING MS20601AD4W3 RIVET (4 PLACES)
  6. AFTER FINISH, INSTALL D3492-047 PLUG ASSEMBLY (2 PLACES)

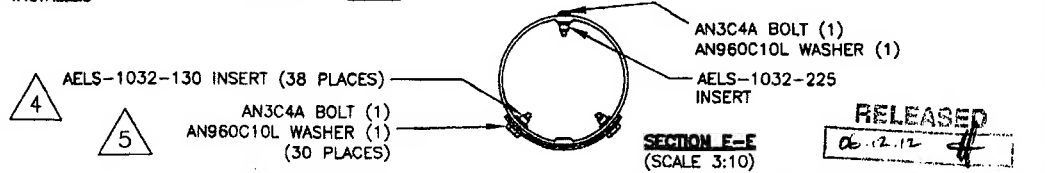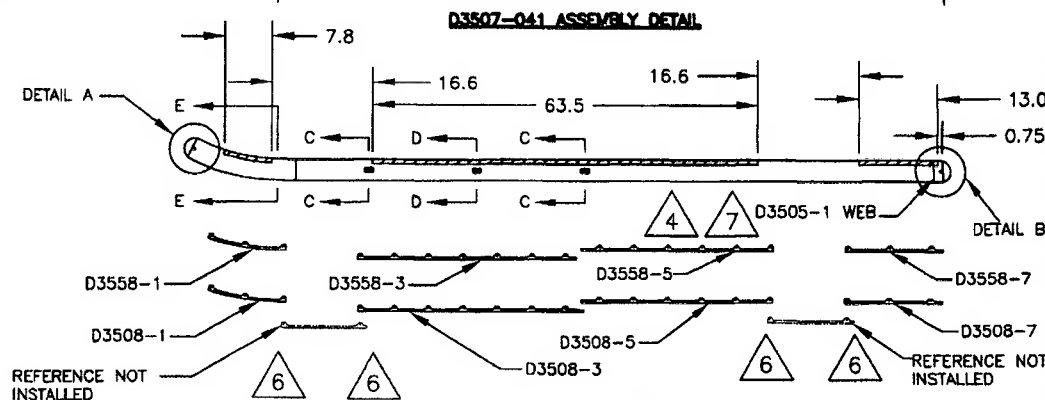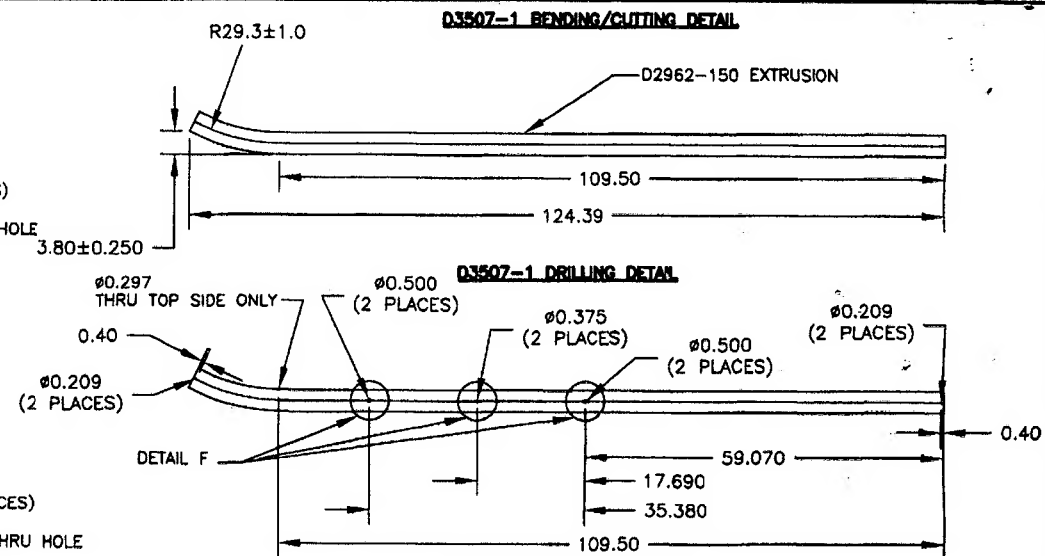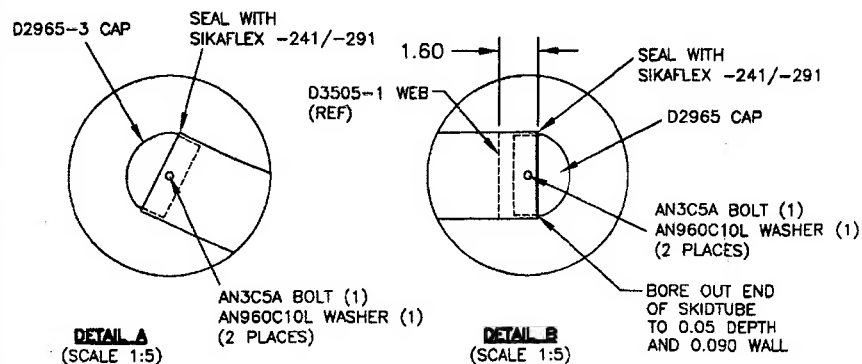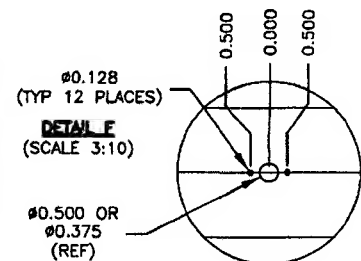

COPYRIGHT © 2006 BY DART AEROSPACE USA, INC.		DESIGN PH	DRAWN BY PH	DART AEROSPACE USA, INC. PORT HADLOCK, VA	
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.		CHECKED	APPROVED	DRAWING NO. D3507	REV. B
DATE 06.11.01		TITLE EC 135 SKIDTUBE ASSEMBLY		SHEET 2 OF 2 SCALE 1:20	





NO. 100

AWS D17.1.2001  
QUALIFICATION TEST RECORD

Name Barclay Elliott  
Joint Welding Procedure Tig  
Part number and Job number 135751011/B 28956

TEST WELDS REQUIRED

BASE METAL Alum WELDING PROCESS Tig  
Penetration Complete [ ] Partial [☒]  
Current AC [☒] DC [ ] Single Weld [☒] Double Weld [ ]  
Backing YES [ ] NO [☒]

	Position	Vertical	Down [ ]	Up [ ]
Sheet Groove	1G [ ]	2G [ ]	3G [ ]	4G [ ]
Tube Groove	1G [ ]	2G [ ]	5G [ ]	6G [ ]
Sheet Fillet	1F [ ]	2F [ ]	3F [ ]	4F [ ]
Tube Fillet	1F [ ]	2F [ ]	4F [ ]	5F [ ]

Crossbolt Spacer Welded into \_\_\_\_\_ Skidtube

TEST RESULTS

Visual Pass [☒] Fail [ ]  
Penetration Pass [☒] Fail [ ]  
Crossbolt Spacer Pass [☒] Fail [ ]

The above named individual is qualified in accordance with AWS D17.1.2001 to weld

Date of Test Coupon 07/03/26 Qualifier [Signature]